







EXPLANATION

- B1  Proposed soil boring location
- B5  Proposed hand auger boring location
- VEW-1  Vapor Extraction well location
- MW-1  Monitoring well location
- SB-1  Soil boring location
- TP1  Soil sample location

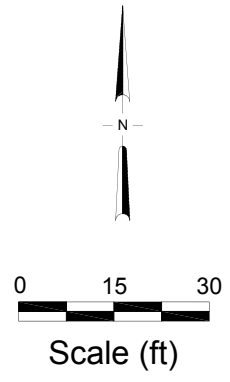


FIGURE
2

S:\9-3754 NORTH HIGHLANDS\FIGURES\SITEPLAN1.DWG

Former Chevron Station 9-3754
6801 Watt Avenue
North Highlands, California



C A M B R I A

**Proposed Soil Boring
Locations**